



AUTOWATCH KEYGUARD

What is Key Guard?

Key Guard is an electronic module that integrates with the cars electrical system to prevent unauthorised use. It is controlled via an encrypted control pad.

Key Guard has been developed in response to the alarming growth in car theft where the owners keys are used to steal the car.

Key Guard prevents unauthorised drivers from starting your car using your keys.

Key Guard provides a PIN Code(Personal Identification Number) for your car keys.

Key Guard does not affect your vehicle warranty, as the system can be installed without any wires being cut (note that professional installation is required).

Key Guard can be installed in almost any vehicle that has a 12 volt battery.

How does Key Guard work?

Key Guard requires you to enter a 4 digit PIN number (like your bank card) before the car engine will start.

You can enter your 4 digit PIN before or after you have unlocked your vehicle.

You can personalize and change your PIN number as many times as you wish.

Key Guard uses anti scan technology, so a thief cannot electronically grab your code.

Research has proven that entering your Key Guard PIN soon becomes as natural as using a normal key fob